

MICROPHONE MIXERS



MA-6 STUDIO MIXER

MONO INPUTS 4 channels
MICROPHONE IN
BALANCED IN 4 X XLR 1K OHM , 6.3STEREO JACK
INPUT SENSITIVITY -55dB
SIGNAL TO NOISE 120dB
PHANTOM POWER 48V DC

LINE IN
LINE INPUT BALANCED 6.3STEREO JACK
INPUT SENSITIVITY -33dB
GAIN RANGE 34dB

STEREO IN
LINE INPUT 10K OHM RCA , 6.3ST BALANCED
SIGNAL TO NOISE 80dB
INPUT SENSITIVITY -25dB

EQUALIZATION ON ALL CHANNELS

EQUALIZATION -HI 12KHz +- 15dB
EQUALIZATION -MID 2.5KHz +- 15dB
EQUALIZATION -LO 80Hz +- 15dB

MASTER MIX SECTION

MASTER OUTPUT +4dB , LEFT AND RIGHT
AUX OUTPUT +10dB , LEFT AND RIGHT
EFFECT OUTPUT +17dB
5 SEGMENT LED LEVEL METER

PEAK LED INDICATOR ON ALL CHANNELS

BUILD IN DIGITAL EFFECTS

FOR UNBALANCED IN USE 6.3MONO PLUGS

NOTE :PHANTOM POWER MUST BE SWITCHED OFF

POWER SUPPLY : AC/DC ADAPTOR 18 - 0 -18 V AC OUT

DJ-40

DISC JOCKEY MIXER

5 CHANNEL

A) 2 X PHONO OR 2 X LINE INPUTS

PHONO INPUT EQUALISED FOR MAGNETIC CARTRIDGE

FADE CONTROL BETWEEN INPUTS (A) .

B) 2 X MIC OR 2 X LINE INPUTS

LINE INPUT FOR CD PLAYER ECT.

1 DJ MIC INPUT

DJ MIC TALK OVER / 6dB ATTENUATION ON ALL CHANNELS

CROSS FADER ON CHANNEL 1 & 2

MIC GAIN CONTROL

HEADPHONE OUTPUT WITH LEVEL ADJUST

CUE SELECT FOR CHANNEL 1 TO 4

TONE GAIN CONTROLS ON CHANNEL 1 , 2 , 3 & 4

MASTER & RECORD OUTPUTS

12V DC SUPPLY IN WITH AC/DC ADAPTOR



MICROPHONE MIXERS



DJ-10

DISC JOCKEY MIXER

2 X PHONO OR 2 X LINE INPUTS

1 MIC INPUT

MIC TALK OVER

CROSS FADER ON CHANNEL 1 & 2

MIC GAIN CONTROLS

CUE SELECT FOR INPUT CHANNELS & LEVEL

TONE GAIN CONTROLS ON CHANNEL 1 & 2

AMP & PHONO OUTPUTS

LEVEL DISPLAY

12V d.c. SUPPLY



PA302U

DISC JOCKEY MIXER

MP3 PLAYER WITH USB INPUT

2 X PHONO OR 2 X LINE STEREO INPUTS

1 X STEREO AUX INPUT

2 MIC INPUT

MIC TALK OVER

CROSS FADER ON CHANNEL 1 & 2


MIC GAIN CONTROLS

CUE SELECT FOR INPUT CHANNELS & LEVEL

AMP & PHONO OUTPUTS

LED LEVEL DISPLAY

12V d.c. SUPPLY

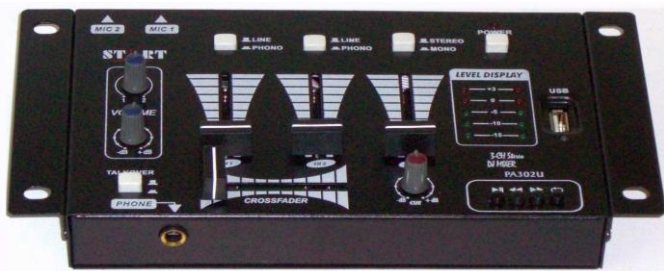

DJ-302

DISC JOCKEY MIXER

2 X PHONO OR 2 X LINE STEREO INPUTS

1 X STEREO AUX INPUT

2 MIC INPUT

MIC TALK OVER

CROSS FADER ON CHANNEL 1 & 2

MIC GAIN CONTROLS

CUE SELECT FOR INPUT CHANNELS & LEVEL

AMP & PHONO OUTPUTS

LED LEVEL DISPLAY

12V d.c. SUPPLY



MICROPHONE MIXERS



MM-14FX

MICROPHONE 4 INPUT MIXER

- 4 X MICROPHONE INPUTS
- 4 X LEVEL CONTROLS
- ECHO EFFECT CONTROLS
- 50dB GAIN
- 9V DC OPERATION
- AC/DC SOCKET , ADAPTOR NOT SUPPLIED



MM8L-2

MICROPHONE 8 INPUT MIXER

- 8 X MICROPHONE INPUTS - MONO POSITION
- 4 X STEREO LINE INPUTS - LINE , STEREO POSITION
- 8 X LEVEL CONTROLS
- 2 X MASTER VOLUME CONTROLS
- 2 X MIC / LINE SWITCHES
- 9V DC OPERATION
- AC/DC SOCKET , ADAPTOR NOT SUPPLIED



KM-2


MICROPHONE 2 INPUT KARAOKE MIXER

FEATURES

- CAN MIX VOCAL WITH DVD SOUND
- CHANGE NORMAL HI-FI TO KARAOKE MACHINE
- ADD VOICE TO TV SOUND FROM ANY PLAYER
- CHANGE A NORMAL HI-FI TO PA AMP
- TONE AND ECHO CONTROL ON MIC ONLY
- SEPARATE VOLUME CONTROL FOR MUSIC AND MIC

SPECIFICATION

- 2 X MICROPHONE INPUTS 6.3mm SOCKETS
- 2 X MIC VOLUME CONTROLS
- 1 X MUSIC VOLUME CONTROL
- 1 X TONE CONTROL
- 1 X ECHO CONTROL
- 1 X AUDIO / VIDEO INPUT , 3 RCA SOCKETS
- 1 X AUDIO / VIDEO OUTPUT , 3 RCA SOCKETS
- 12 VOLT DC WITH AC/DC ADAPTOR

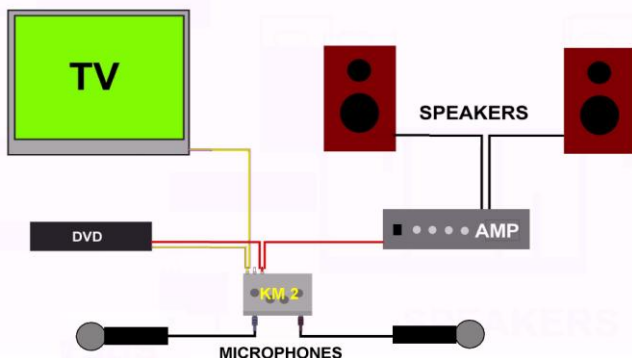

MICROPHONE MIXERS



MIX-278

MIC / PHONO PRE-AMPLIFIER



2 X MONO MIC INPUTS OR 1 X STEREO MIC INPUT

2 X PHONO (RECORD PLAYER) INPUTS

SUPPLY VOLTAGE REQUIRED : 12 - 15 V o.k..

OUTPUT ; 150mV RMS STEREO

MIX-279

HEADPHONE AMPLIFIER

SIGNAL BOOST AMP

Connect headphones to any device with aux output .
TV , DVD , MIXER .

Ideal to boost signal , low output impedance

2 X RCA AUX INPUT , 100k ohm

2 X 6.3mm STEREO SOCKETS OUTPUT , 16 ohm

SUPPLY VOLTAGE : 12 - 15 V AC/DC . NOT SUPPLIED



MIX-279 A

MICROPHONE PRE AMP

SIGNAL BOOST AMP

MICROPHONE INPUT TO AUX OUTPUT

Ideal to boost signal , low output impedance

2 X RCA AUX OUTPUT , 100k ohm

2 X 6.3mm SOCKET INPUTS

SUPPLY VOLTAGE : 12 - 15 V AC/DC . NOT SUPPLIED



PM 40

SUBWOOFER ACTIVE FILTER

4dB AMPLIFIER

2 X RCA PLUG STEREO INPUT

1 X RCA PLUG SUB BASS OUTPUT

12V AC/DC ADAPTOR SUPPLIED